

## CO<sub>2</sub> Dosing Device

### General information

Recent developments like reduction of storage time, high gravity brewing, the production of non-alcoholic beers and high volume storage tanks result in a growing demand for carbonation.

The Haffmans long experience and references, as well as our installed base management approach regarding CO<sub>2</sub> injection as well as CO<sub>2</sub> dissolution not only guarantee a “bubble free” CO<sub>2</sub> injections but also accurate CO<sub>2</sub> dosages that ensure a perfect process control.

### Principle of Operation


CO<sub>2</sub> is injected into the inlet of the dissolving tube and finely dispersed with help of static mixers. After this, a calculated number of static mixers will ensure that all the remaining CO<sub>2</sub> dissolves. This absorption can be checked visually through a sight glass.

The CO<sub>2</sub> analyser determines the amount of CO<sub>2</sub> and controls the CO<sub>2</sub> quantity to be injected so that the required CO<sub>2</sub> content is accurately achieved.

### Description

The AGM is a skid-mounted system utilising proven components, including all required piping, wiring and control system. The hygienic, fully automatic and reliable design guarantees easy handling, low maintenance and a long lifetime. Extensive factory tests, excellent worldwide references and thorough installed base management are evidence of the quality and reliability of the CO<sub>2</sub> Dosing Device, type AGM.

## Beverage CO<sub>2</sub> Systems

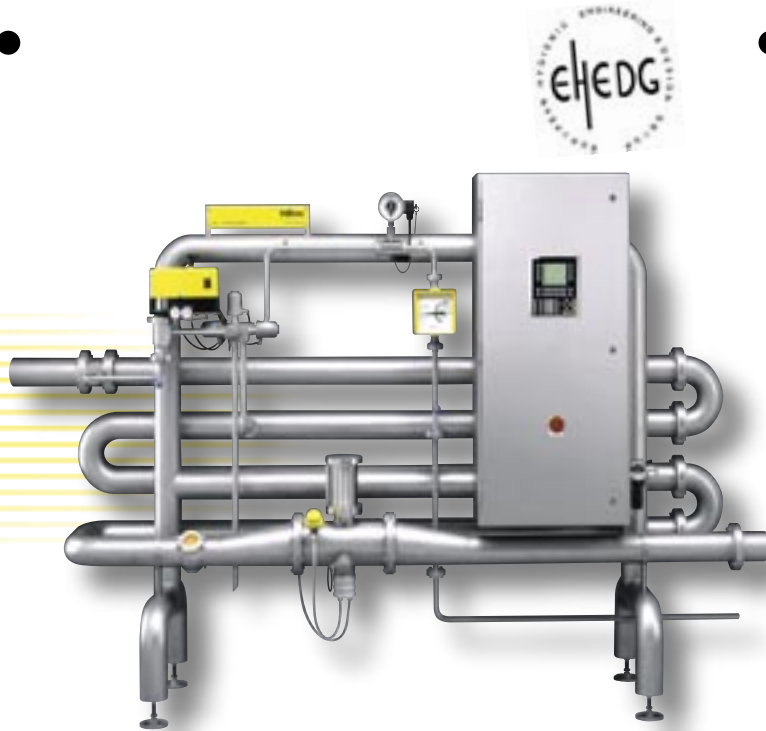

## Technical information

### Cleaning

The CO<sub>2</sub> Dosing Device complies with the highest sanitary standards. The unit is provided with full automatic CIP capability.

### Service

The CO<sub>2</sub> Dosing Device is a user-friendly and fully automatic system, with almost no need for spare parts. The self-diagnostic electronics help you adequately in case of problems. Clear operating instructions, maintenance information and a reliable service department are part of our services.

### Benefits

- High measuring and control accuracy
- Hygienic Design
- CO<sub>2</sub> bubble-free dissolved
- No gas losses
- Fully PLC controlled

### Measuring Ranges

CO<sub>2</sub>: 2.0 - 9.9 g/l

### Dosing Accuracy

CO<sub>2</sub>: +/- 0.05 g/l

### Options

- Pressure control loop
- Constant pressure valve
- Double seat valve for CO<sub>2</sub> CIP by-pass
- Nitrogenation

### Material



Product Contact parts: AISI 316

Non Contact parts: AISI 314

### Control Cabinet

Protection class: IP 54

Haffmans B.V. reserve the right to make changes in the technical specifications at any time.

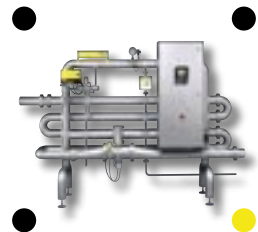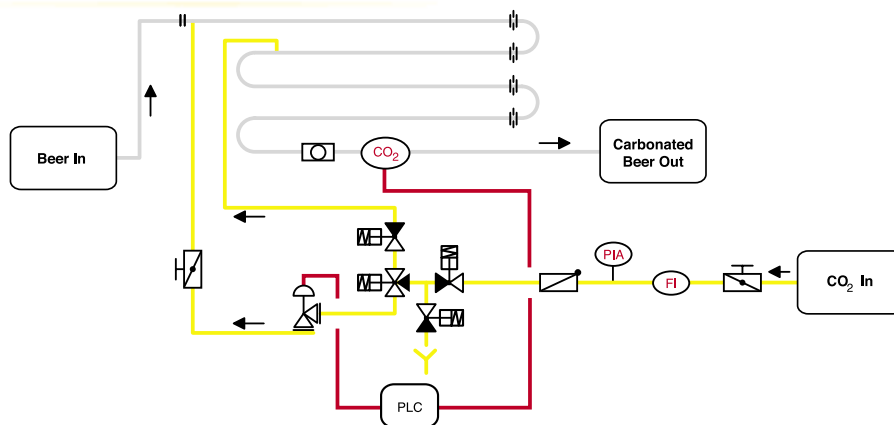

### Haffmans B.V.

P.O. Box 3150 NL-5902 RD Venlo, The Netherlands

T: (+31) (0)77 323 23 00 F: (+31) (0)77 323 23 23

E: [info@haffmans.nl](mailto:info@haffmans.nl) I: [www.haffmans.nl](http://www.haffmans.nl)



**NORIT** The Purification Company

**AGM**